

## Instructions for using the Ipanorame Pinhole Camera templates:



There are 4 sheets that should be individually printed onto normal letter size, landscape oriented paper. Each sheet should be adhered to the face of the Foamboard panels. The easiest way to secure the templates to the Foamboard is to use photo or stencil spray glue available in any craft shops, then carefully cut out the parts with an X-Acto type hobby or similar knife. . The cuts should follow the template as closely as possible, but gaps and imperfections will be covered by the tape used on the edges during the building process. Follow the instructions for the Ipanorame Camera for assembly instructions.

Enjoy your camera. Feel free to use this template as a starting point for new camera designs and ideas.

David Doler  
daviddoler@comcast.net

© 2003-2005 David Doler

**IPANORAME Camera Foamboard  
cutout templates. Spray glue to  
1/4" (3/32") Foamboard and cut out  
each part as indicated in the builder's  
guidebook. (c)2003-05 David Doler  
daviddoler@comcast.net**

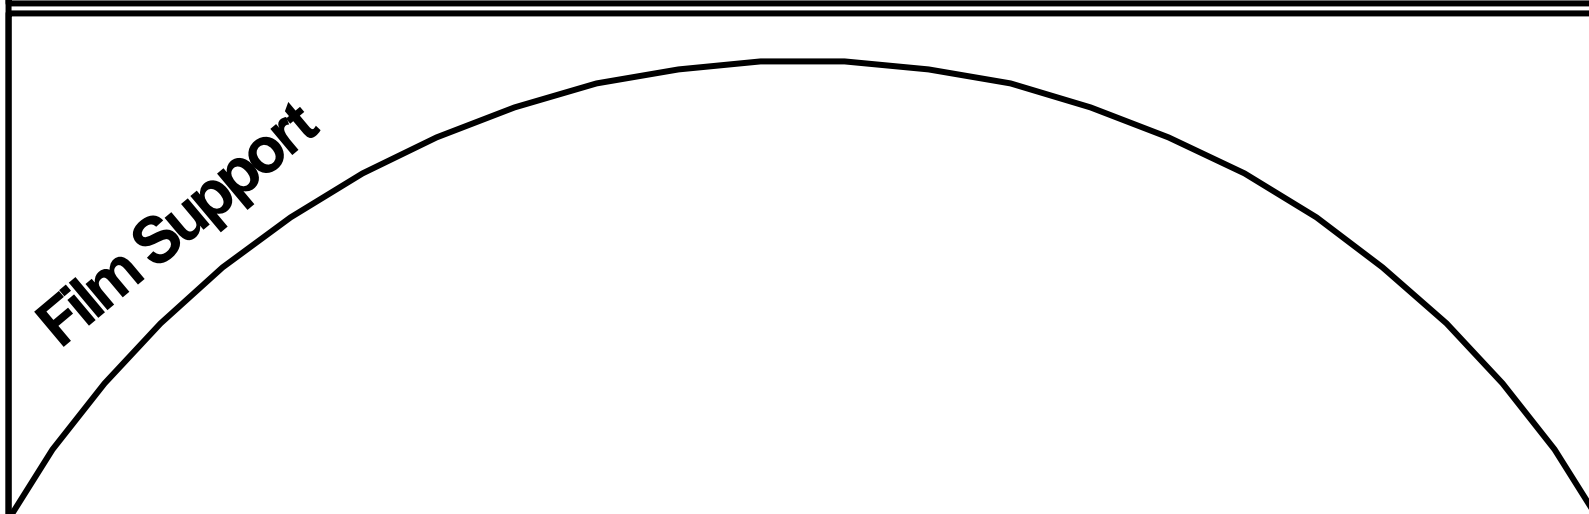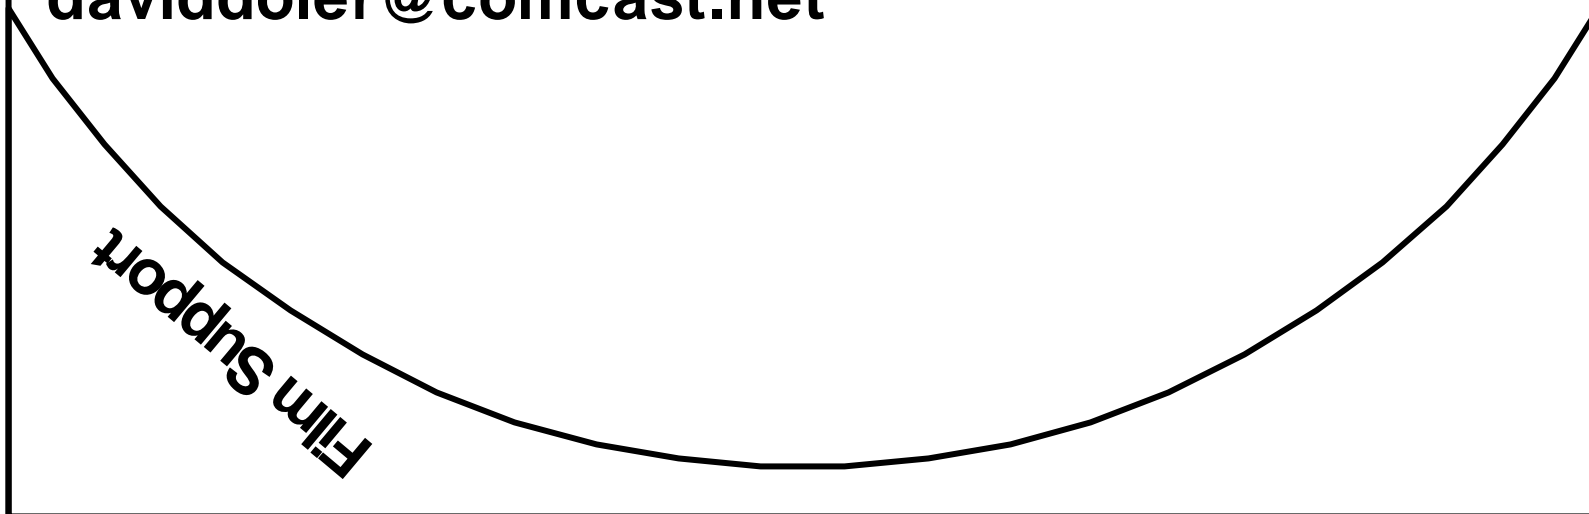

**Bottom**

**Back**

**Left Side**


**Right Side**

**Inner Lid**

**SHEET3**

**Outer Lid**

**Front**

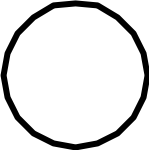

**Spacer**

**Spacer**

**Spacer**